



User Guide

PS2260

1D Bluetooth & 2.4G Barcode Scanner



Factory Default



RF Setting



Bluetooth Mode

Bluetooth Pair

Pair process :

(1)Scanner pair with receiver : scan "I" code, then "II"code , make receiver connect with adaptor , waiting for pair successfully.

(2)Scanner pair with Bluetooth device : scan "I"code, then "II"code, open the Bluetooth device , search for Bluetooth "R&B40" to connect.

I、



II、



Keyboard ON or OFF in IOS mode



Note: in IOS mode, if the keyboard on, scan this code, the keyboard will off, if the keyboard is off, scan this code, the keyboard will on.

Scan mode



Automatic successive scanning



Automatic saving scanning



Internal saving scanning

Note:

Automatic successive scanning: can not save data out off distance.

Automatic saving scanning: can save data out off distance.

Internal saving scanning: save all the data.

Quite Automatic saving scanning & internal saving scanning only scan the automatic successive scanning should be ok.

Operate under internal saving scanning mode



upload all data



upload new data



display number of data



display not upload number of data



clear all data

Scanning mode



Manual



Auto-Continuous Scanning Mode



Auto-Flashing Mode

Keyboard Caps Lock Control



Capitalize



Lower Case



Case Swap



None

Buzzer



Sounds OFF



Sounds ON



Sound Lower



Sound Louder

Image Forward & reverse setting



Forward image identify



Reverse image identify

Suffix setting



Enter



Enter-Line



None

Keyboard language



USA



Germany



France

Barcode enable & disable



Enable Code 39



Disable Code 39



Enable UPC-A



Disable UPC-A



Enable UPC-E



Disable UPC-E



Enable EAN-13



Disable EAN-13



Enable EAN-8



Disable EAN-8



Enable Code 93



Disable Code 93



Enable Code 128



Disable Code 128



Enable codabar



Disable codabar



Enable interleaved
2 of 5



Disable interleaved
2 of 5



Enable industrial
2 of 5



Disable industrial
2 of 5



Enable MSI code



Disable MSI code



Enable Plessey



Disable Plessey



Enable Code 11



Disable Code 11



Enable matrix 2 of 5



Disable matrix 2 of 5



Enable postal 2 of 5



Disable postal 2 of 5



Enable aerial 2 of 5



Disable aerial 2 of 5



Enable GS1
omnidirectional



Disable GS1
omnidirectional



Enable GS1 limited



Disable GS1 limited